




we create sustainable outdoor living


C41

CHAT CHAIR

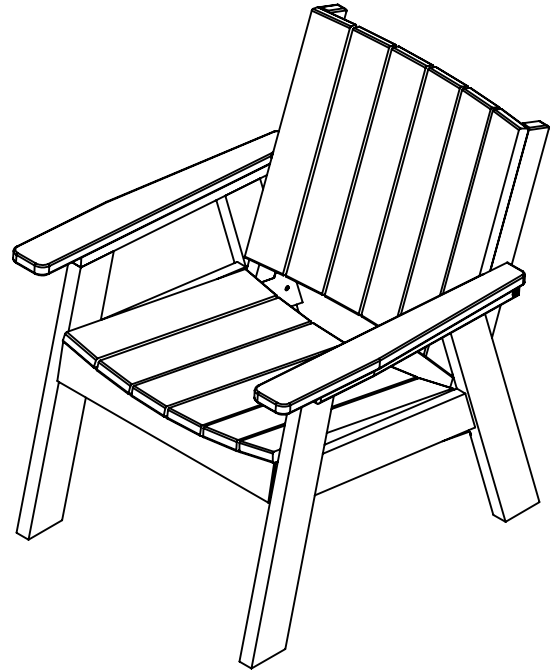


BOX INCLUDES:


Ⓐ x1

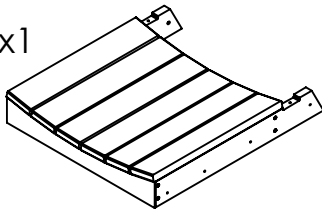


Ⓑ x1

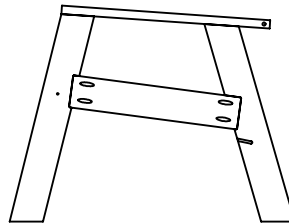

Ⓒ x1

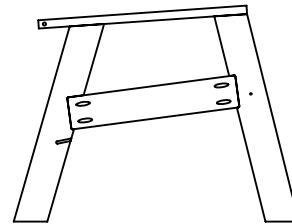

Ⓓ x1

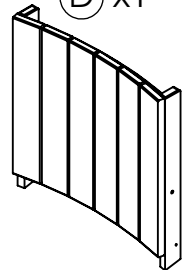


Ⓔ x1




Ⓕ x1



Ⓖ x19



Ⓙ x3

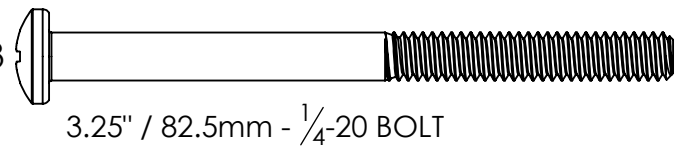


Ⓗ x3



Ⓚ x3



FASTENER SCALE TO 1:1
ONE EXTRA FASTENER





www.crpproducts.com

1

(A) x1



(B) x1

(G) x4

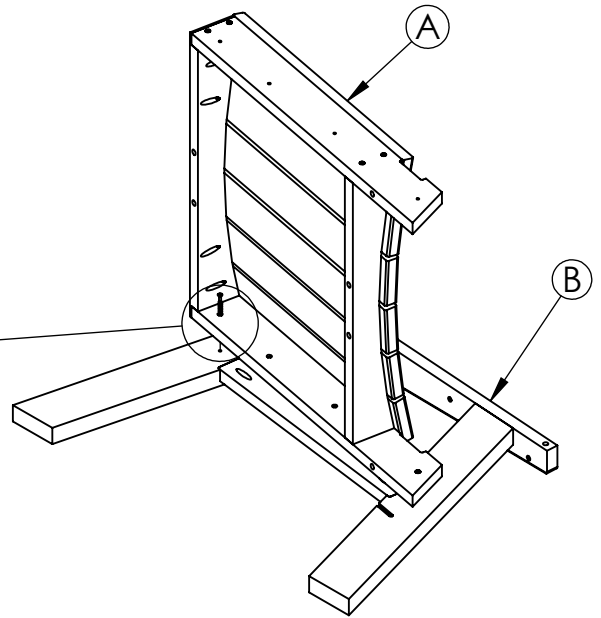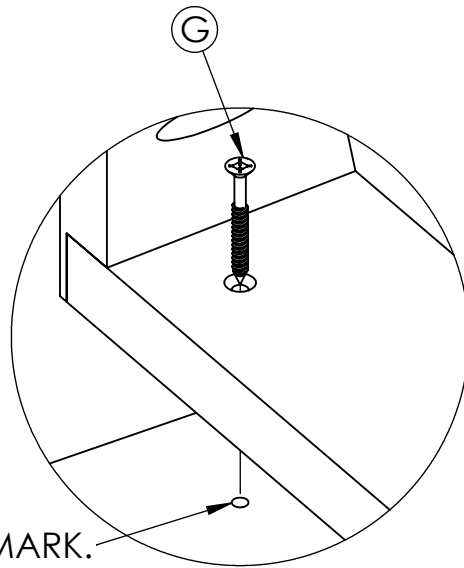

STEP 1.1:

ALIGN TO PECK MARK.

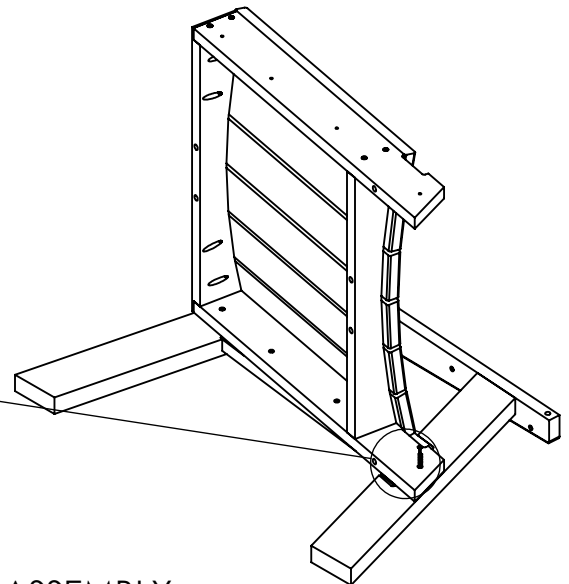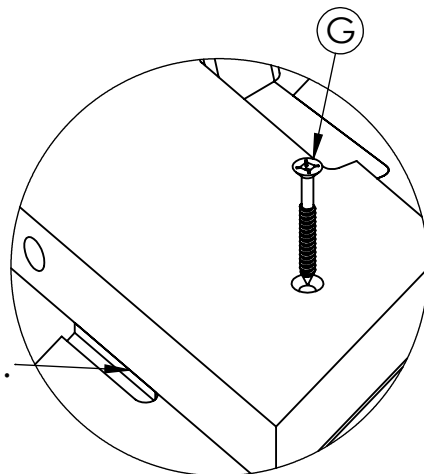



STEP 1.2:

ALIGN TO NOTCH.



NOTE: NOTCH SHOULD BE VISIBLE AFTER ASSEMBLY.



STEP 1.3:

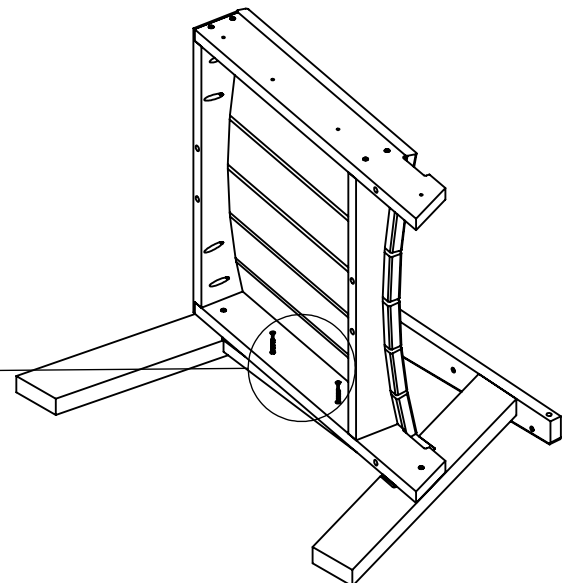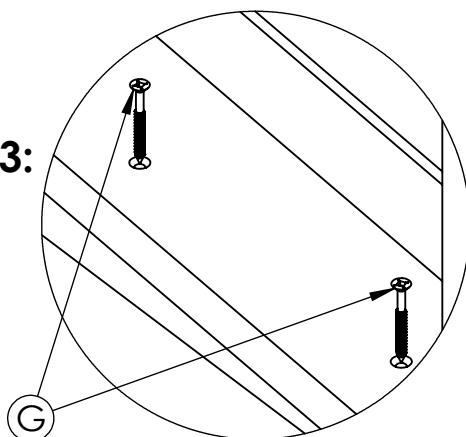

2



Ⓒ x1

Ⓔ x4

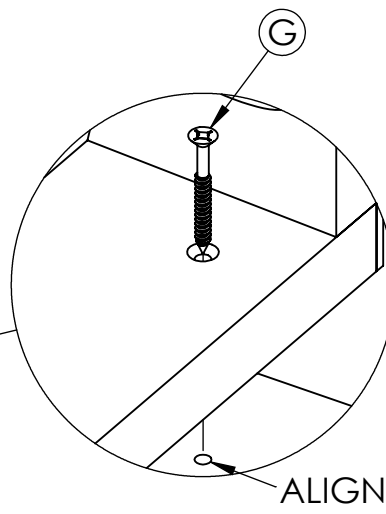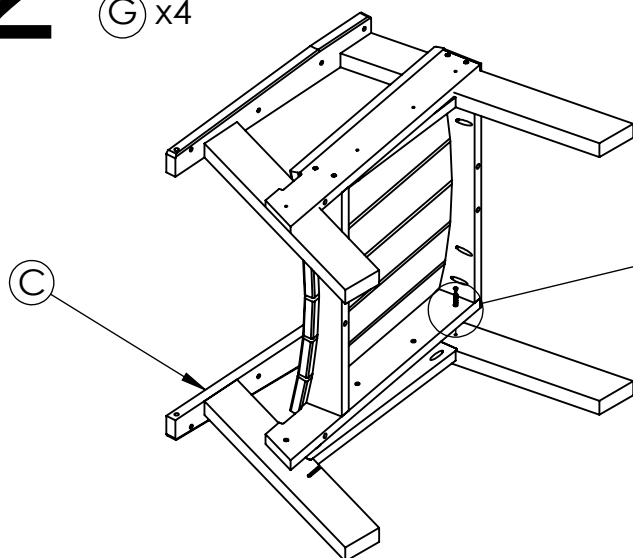

STEP 2.1:

ALIGN Ⓔ TO PECK MARK.

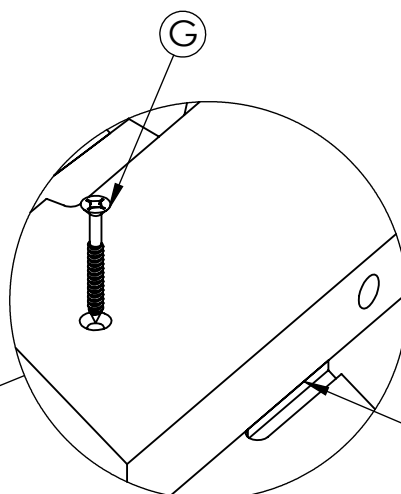
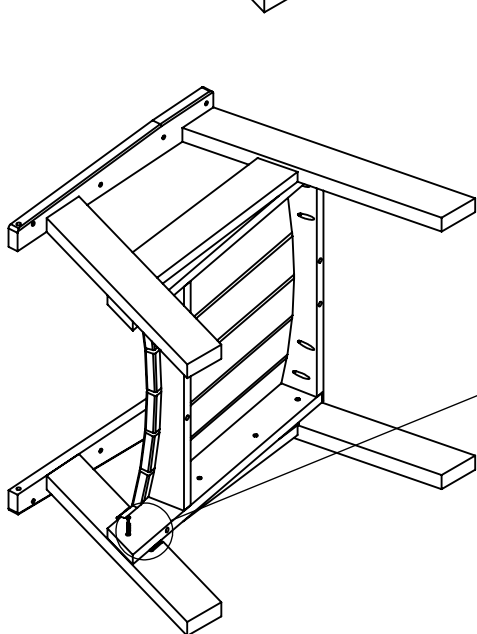


STEP 2.2:

ALIGN TO NOTCH.




NOTE: NOTCH SHOULD BE VISIBLE AFTER ASSEMBLY.

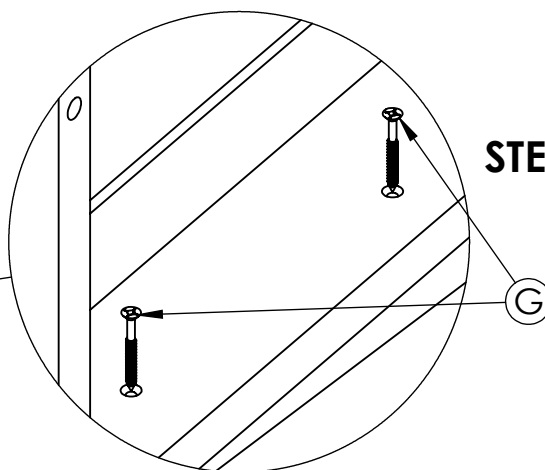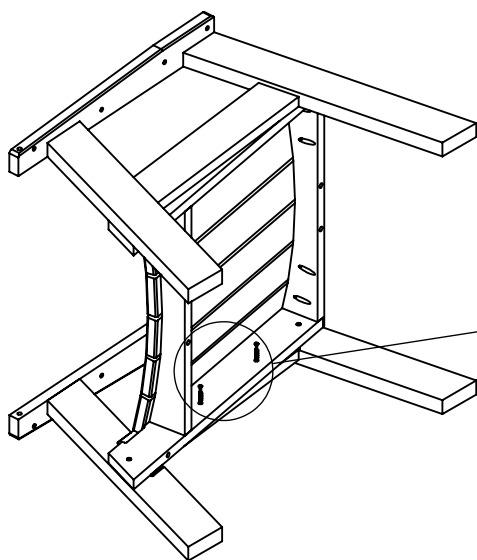

STEP 2.3:


3

Ⓓ x1
Ⓙ x2
Ⓚ x2

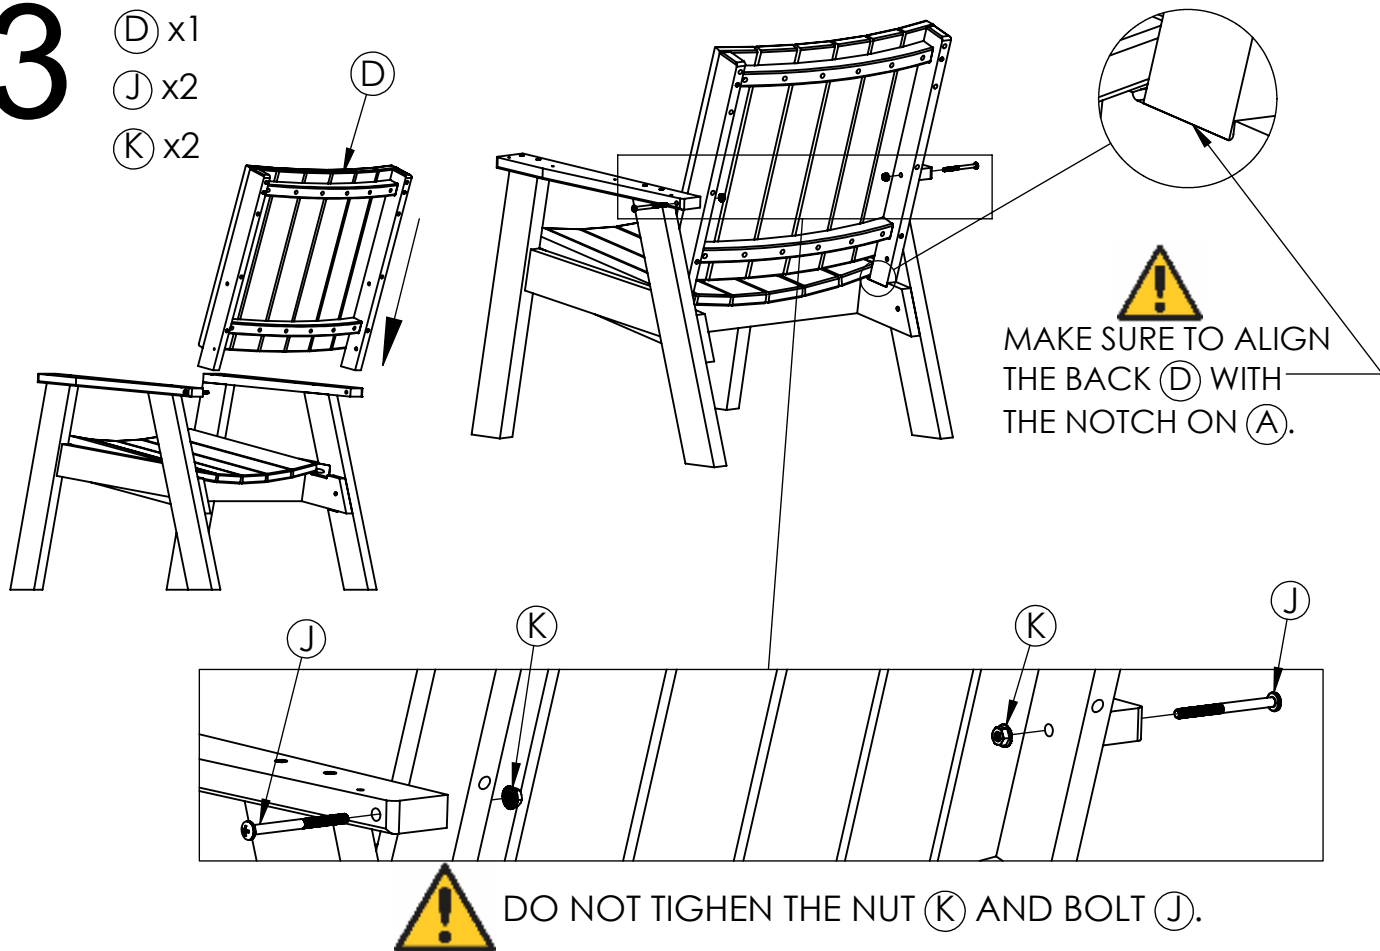

4

ⓓ x2
Ⓔ x2

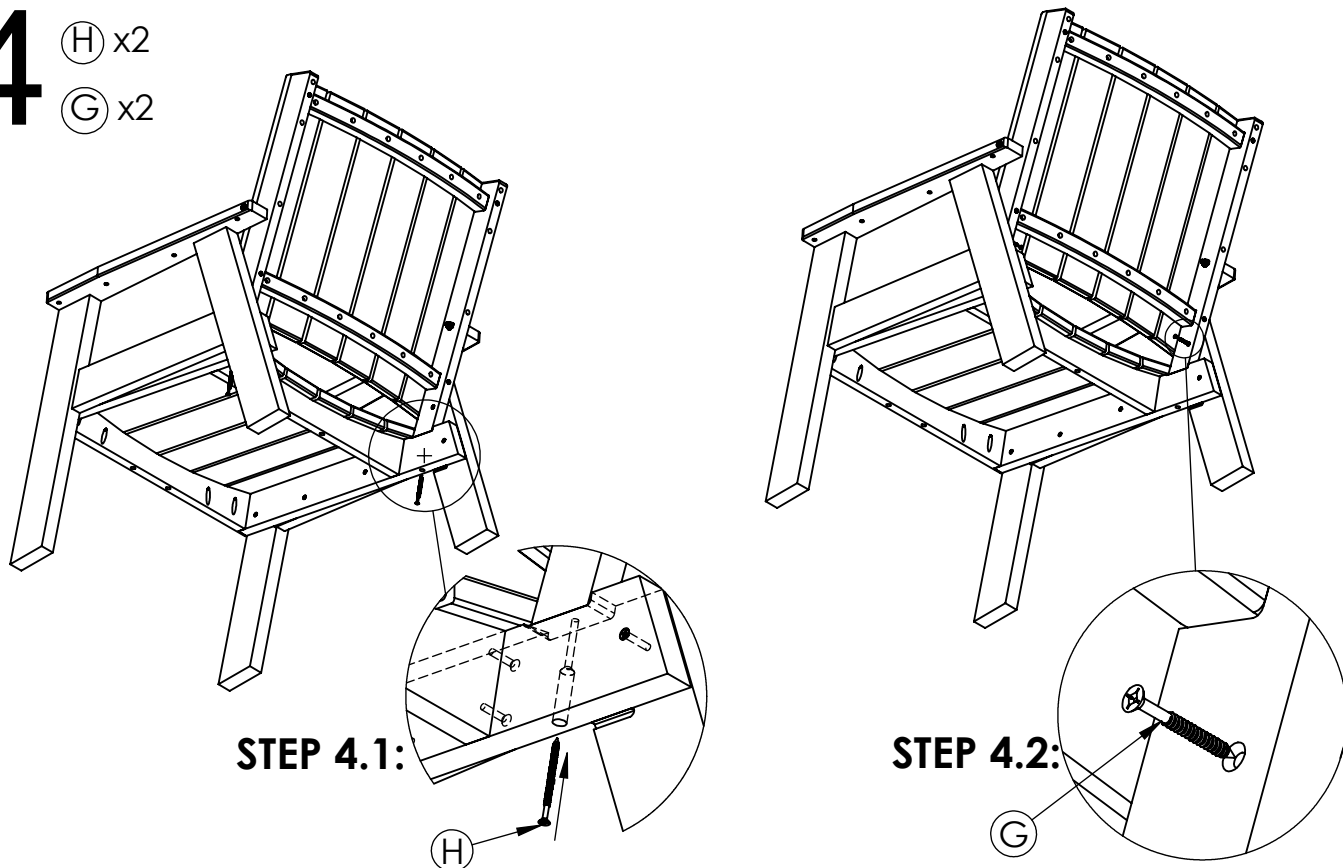


NOTE: ONE SCREW EACH SIDE.

5

Ⓔ x1


Ⓕ x1

Ⓖ x8

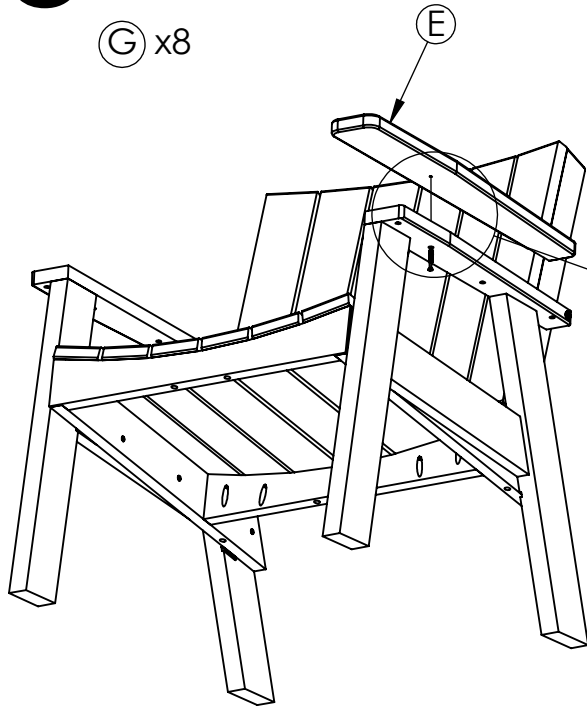



STEP 5.1:

ALIGN Ⓖ TO
PECK MARK.

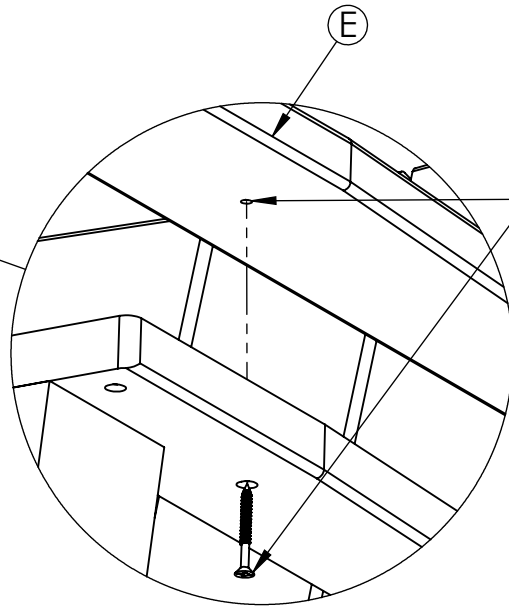


STEP 5.2:

FLUSH THE ARM

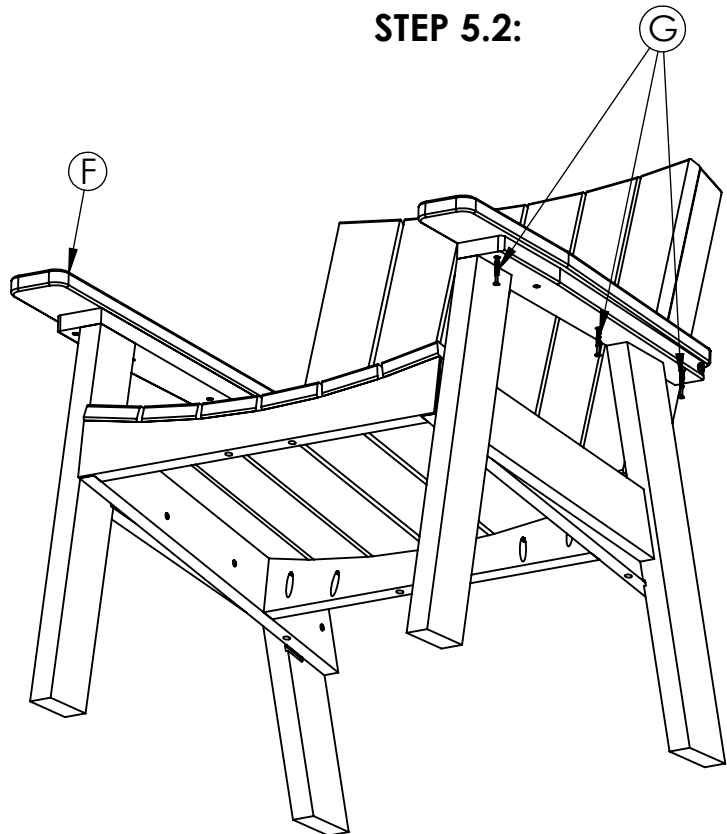
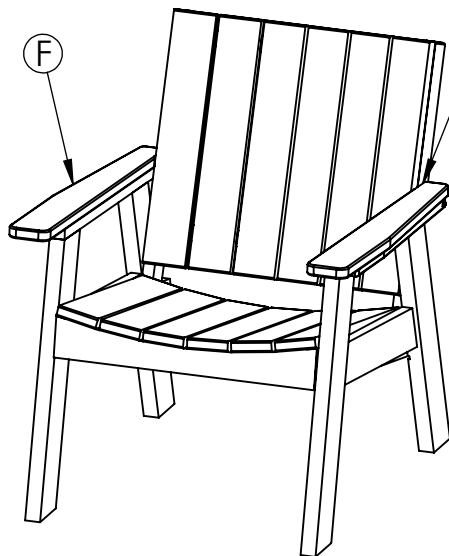


NOTE: REPEAT STEP 5.1 AND 5.2 FOR OTHER SIDE OF ARM Ⓕ.

6

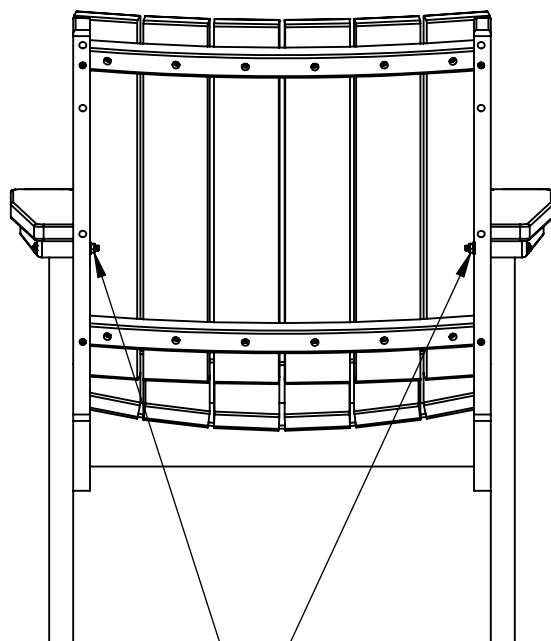

TIGHTEN THE BOLT (J) AND NUT (K)

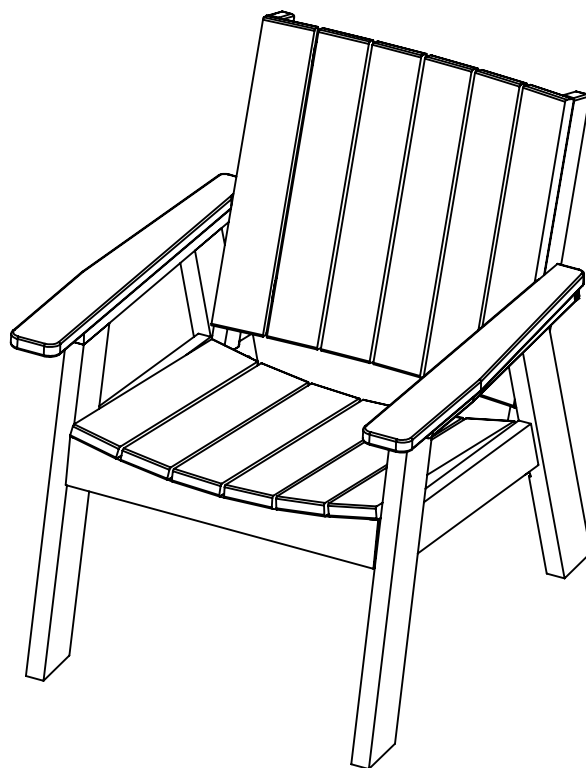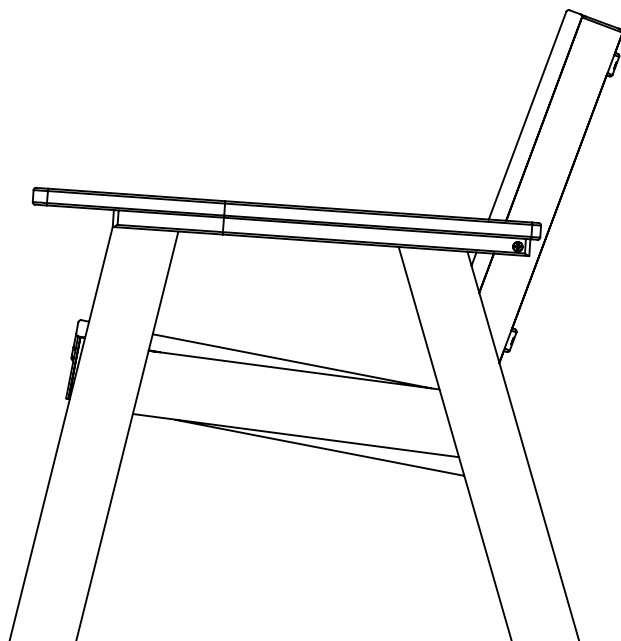

ASSEMBLY COMPLETED.