





we create sustainable outdoor living

DSF296


Charleston Sectional

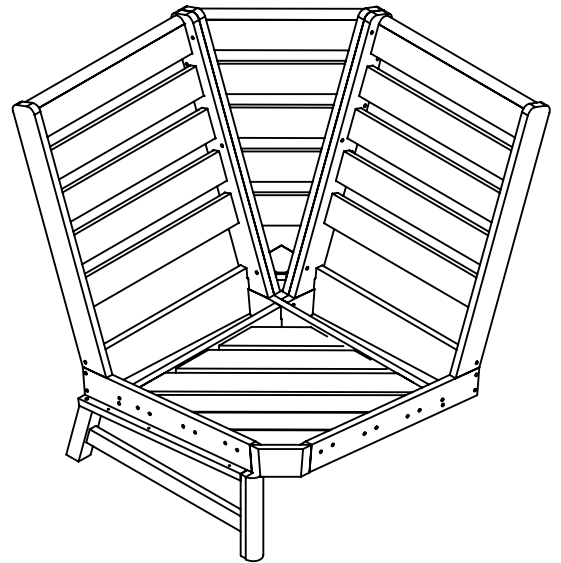

BOX INCLUDES:

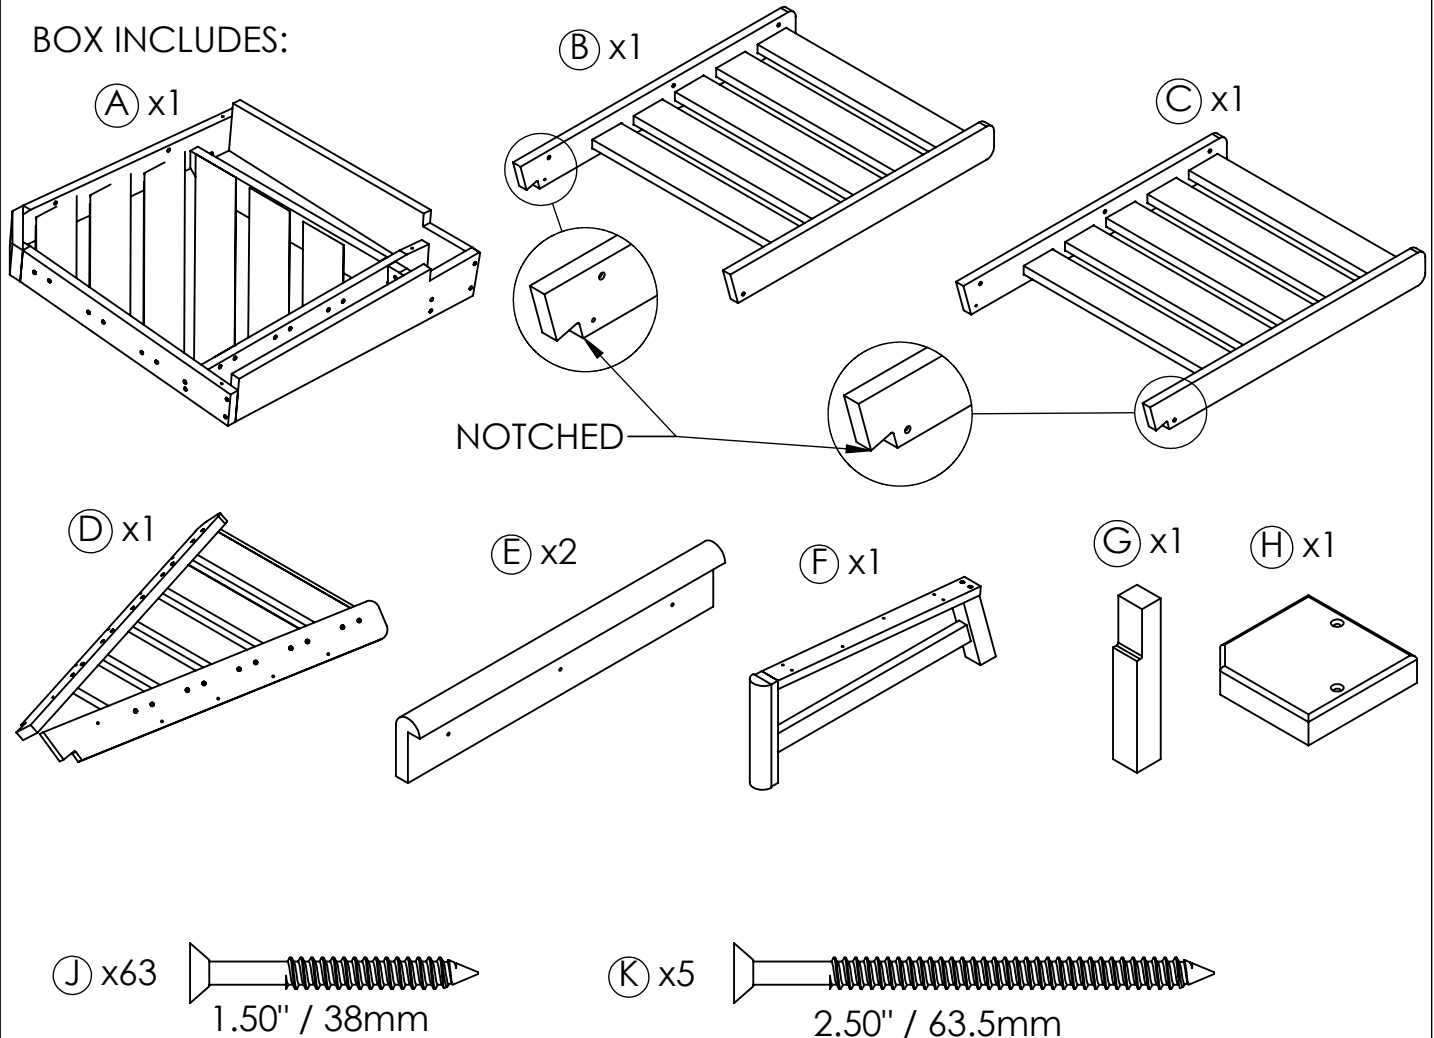

FASTENER SCALE TO 1:1
ONE EXTRA FASTENER



#2

6" LONG DRIVER BIT



www.crpproducts.com

1

(A) x1




(B) x1

(C) x1

(J) x4



CHECK THE SCREW SIZE BEFORE USE

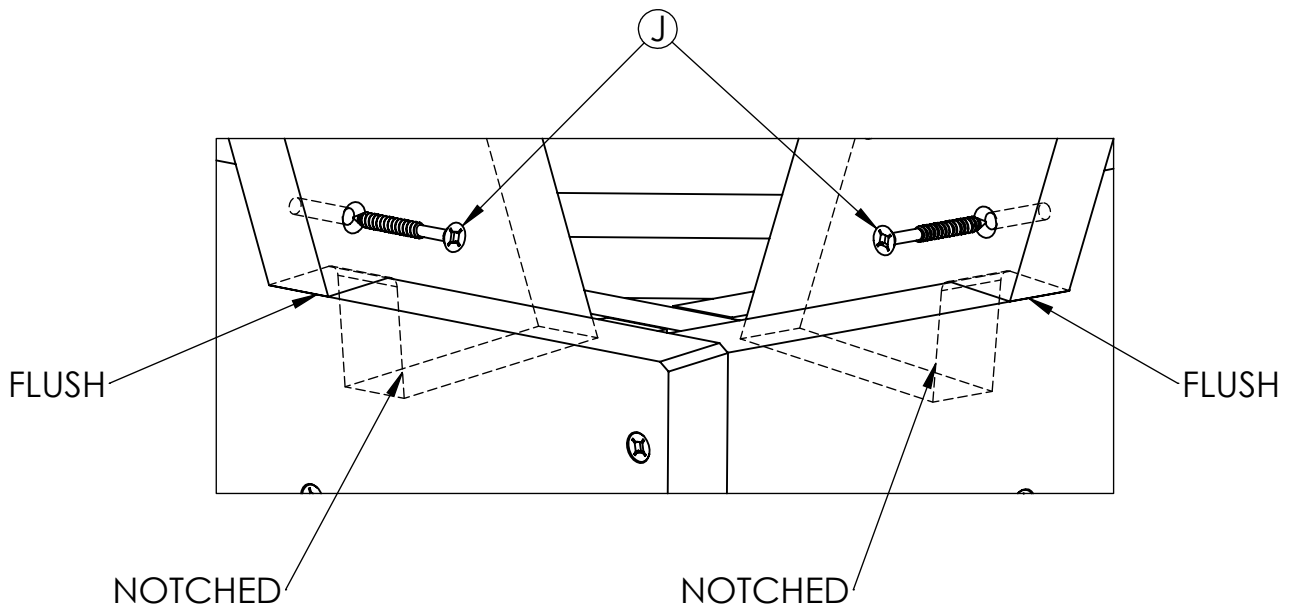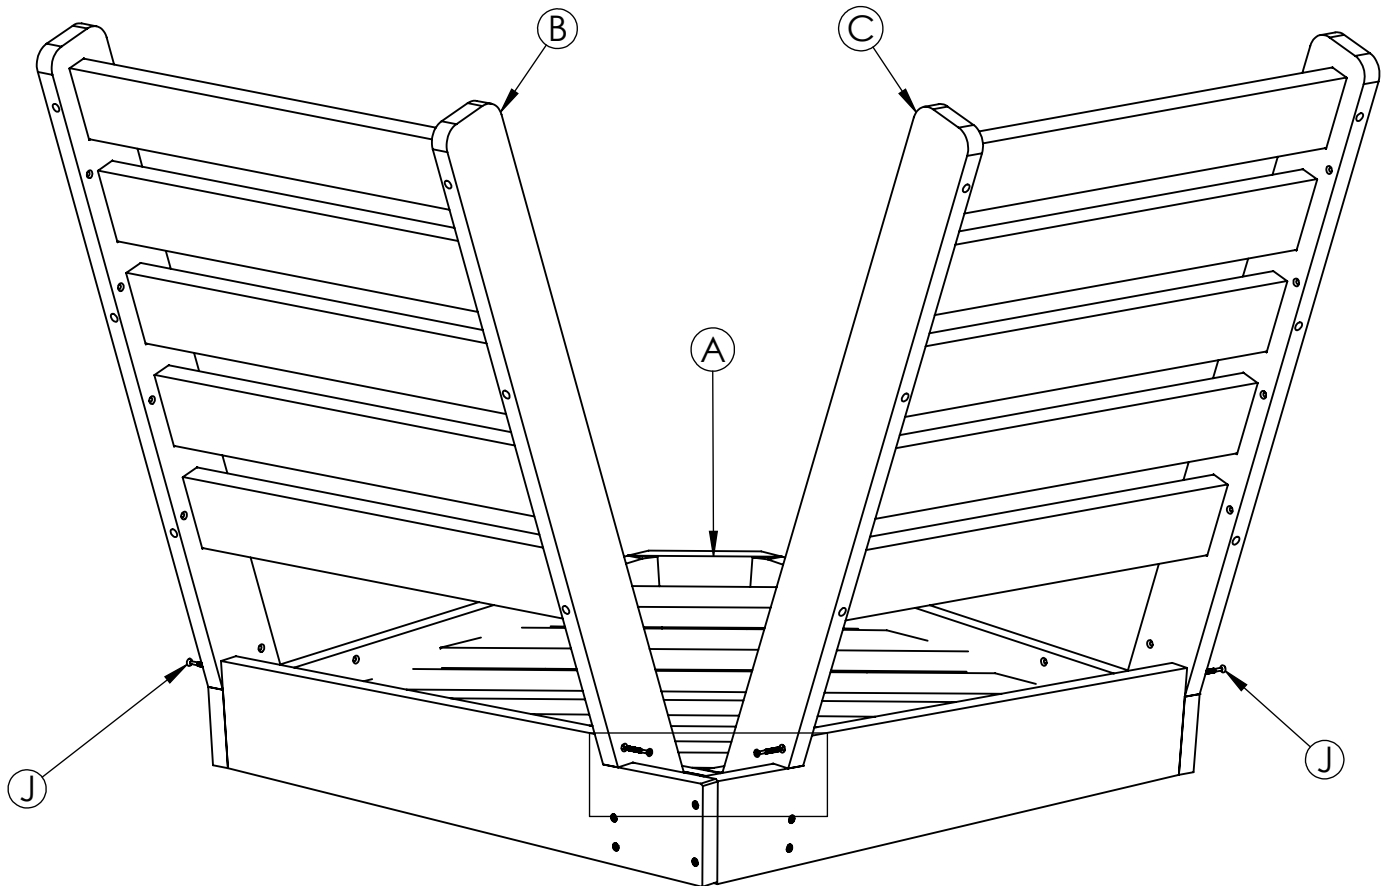

2

(K) x4




CHECK THE SCREW SIZE BEFORE USE

(K)



2.50" / 63.5mm

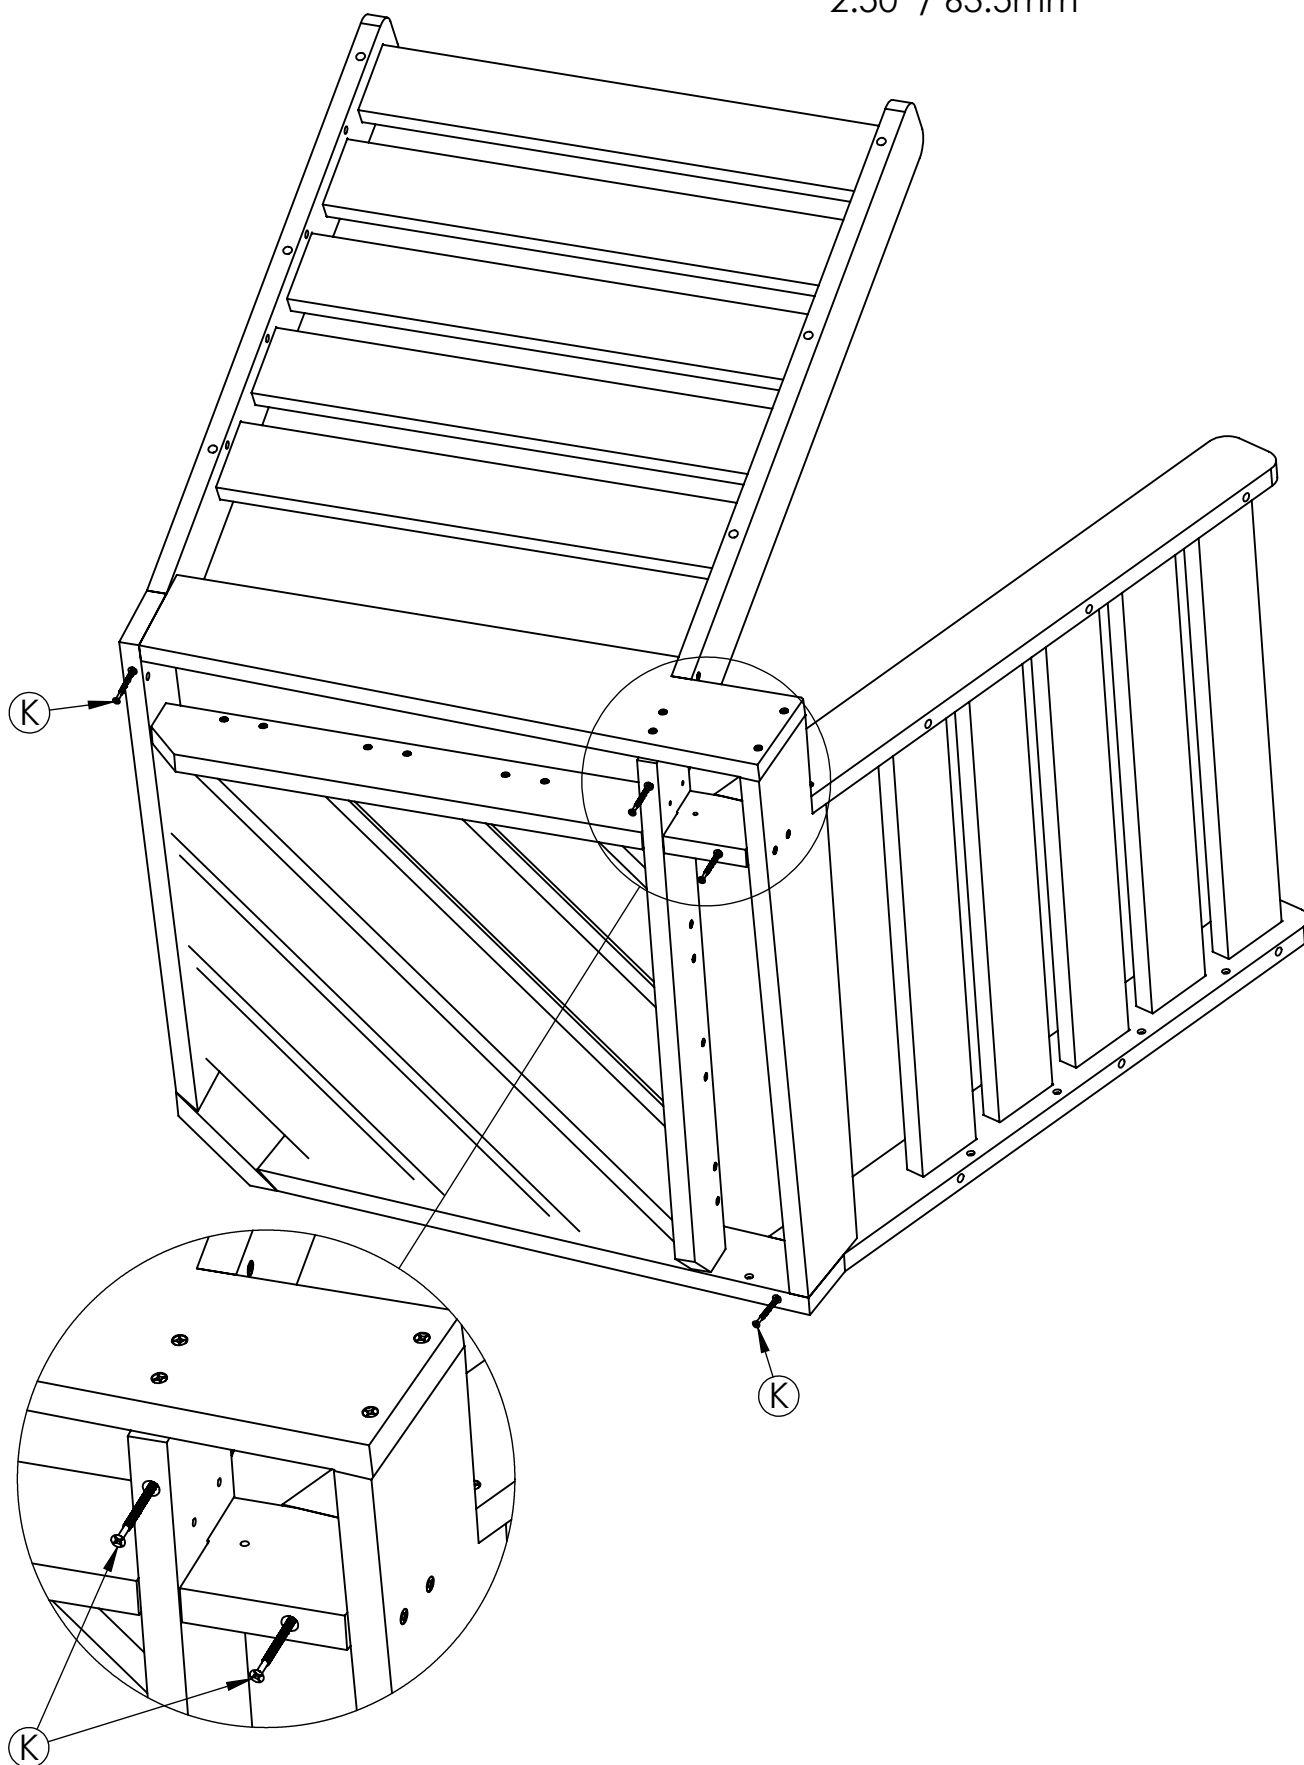

3


ⓓ x1

ⓐ x4




CHECK THE SCREW SIZE BEFORE USE

ⓐ



1.50" / 38mm

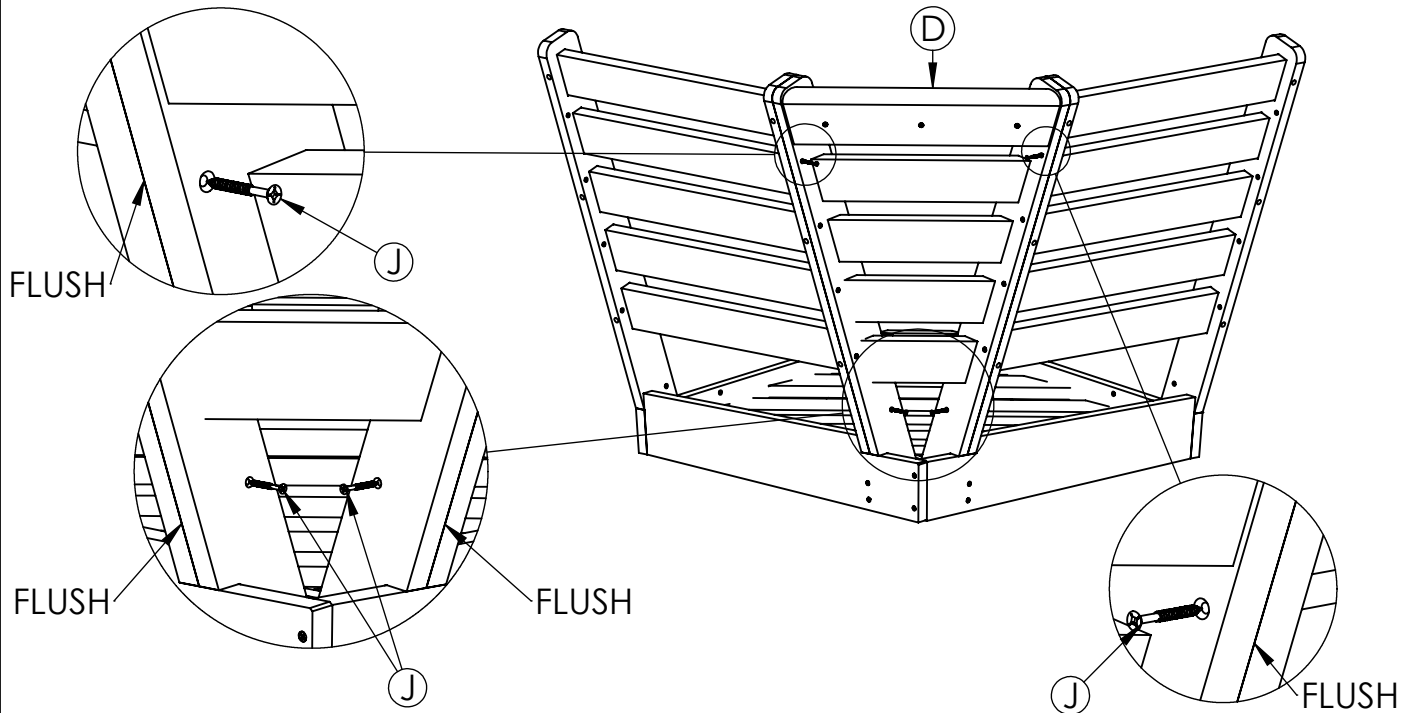

4

ⓐ x20




CHECK THE SCREW SIZE BEFORE USE

ⓐ



1.50" / 38mm

4x ⓐ FROM OTHER SIDE

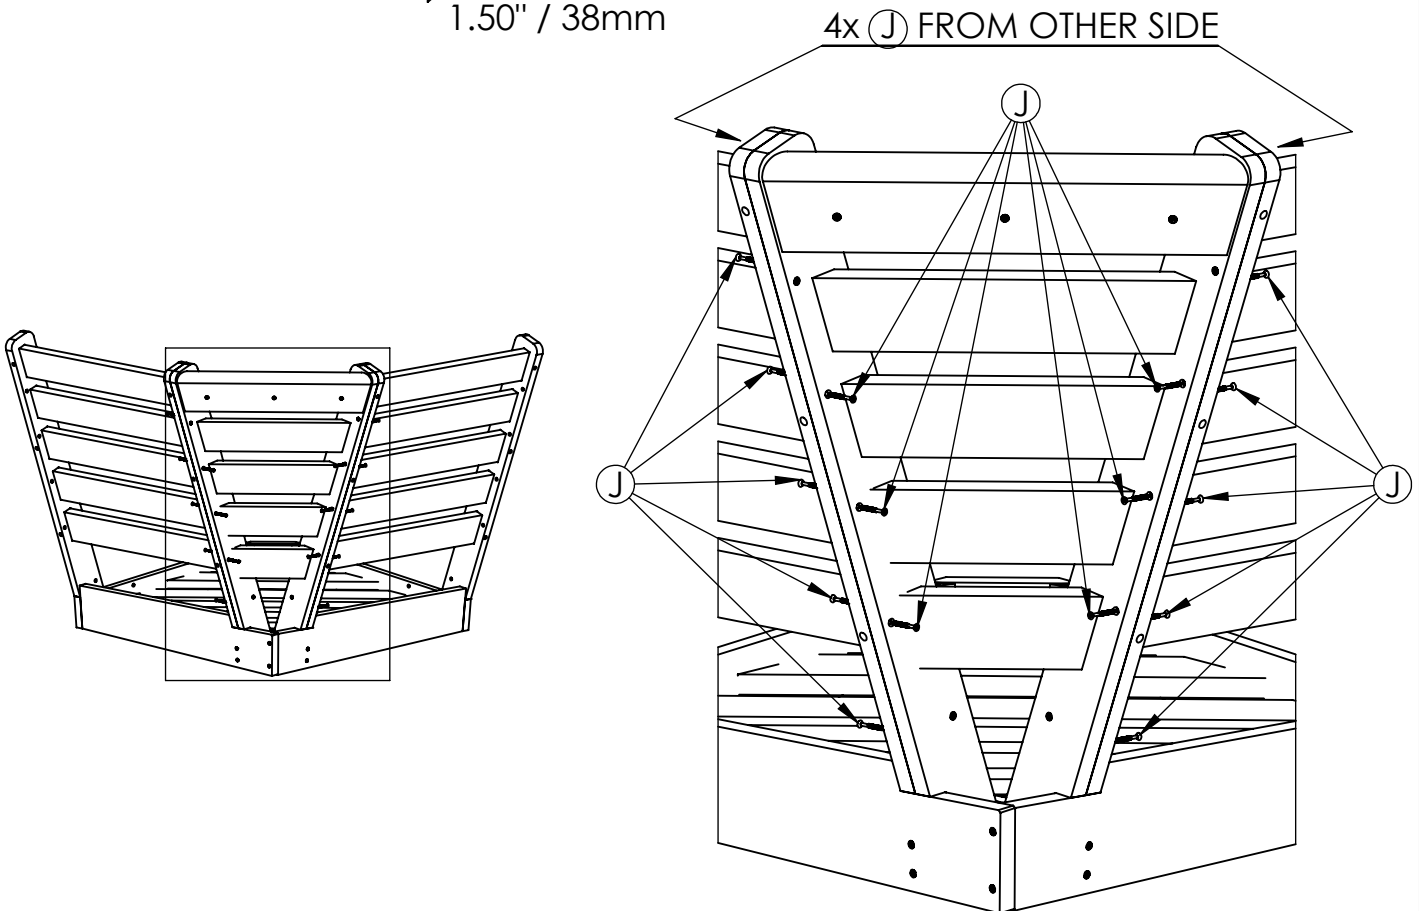



5

Ⓔ x2

Ⓙ x6



CHECK THE SCREW SIZE BEFORE USE

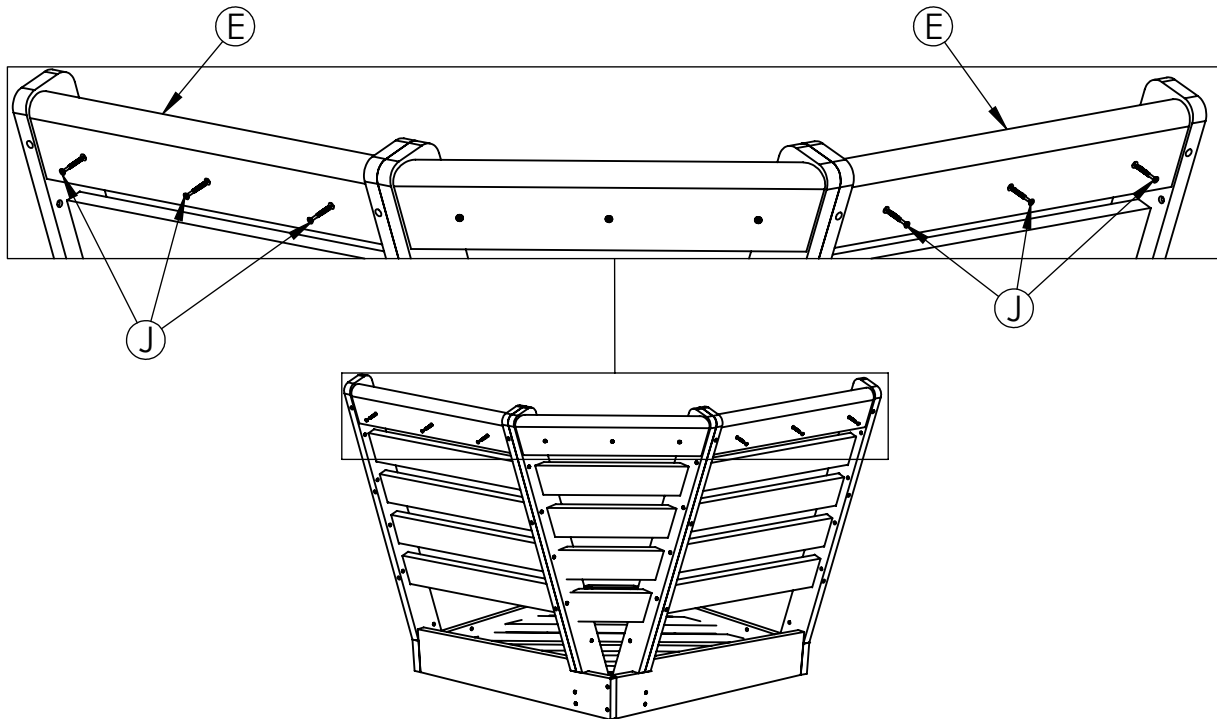



6

ⓕ x1


⓵ x3



CHECK THE SCREW SIZE BEFORE USE

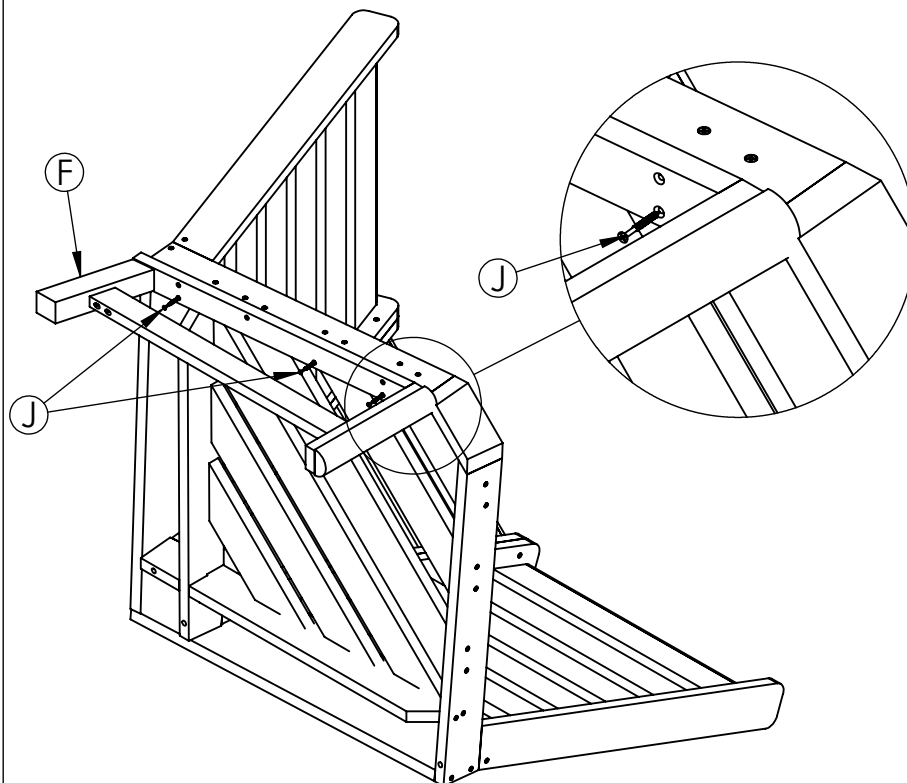

HALF OF ⓕ OVERHANG
AFTER STEP-6.

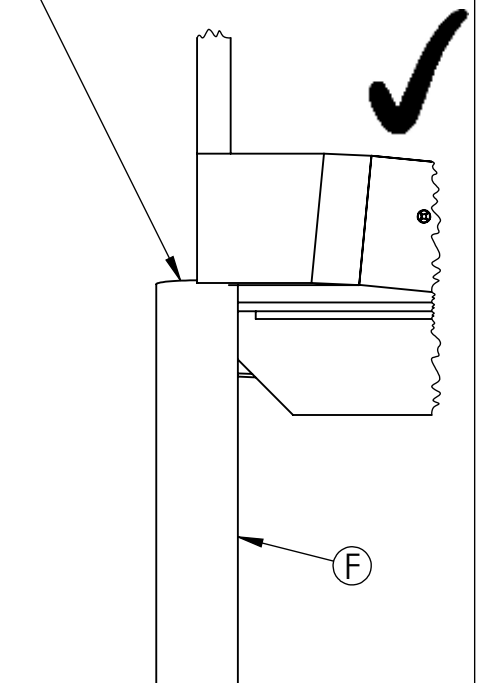


7

Ⓔ x1




Ⓙ x3



CHECK THE SCREW SIZE BEFORE USE



1.50" / 38mm

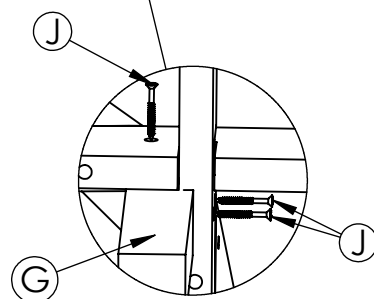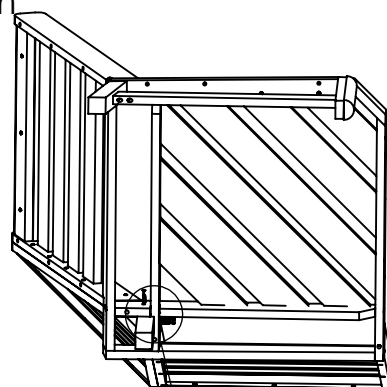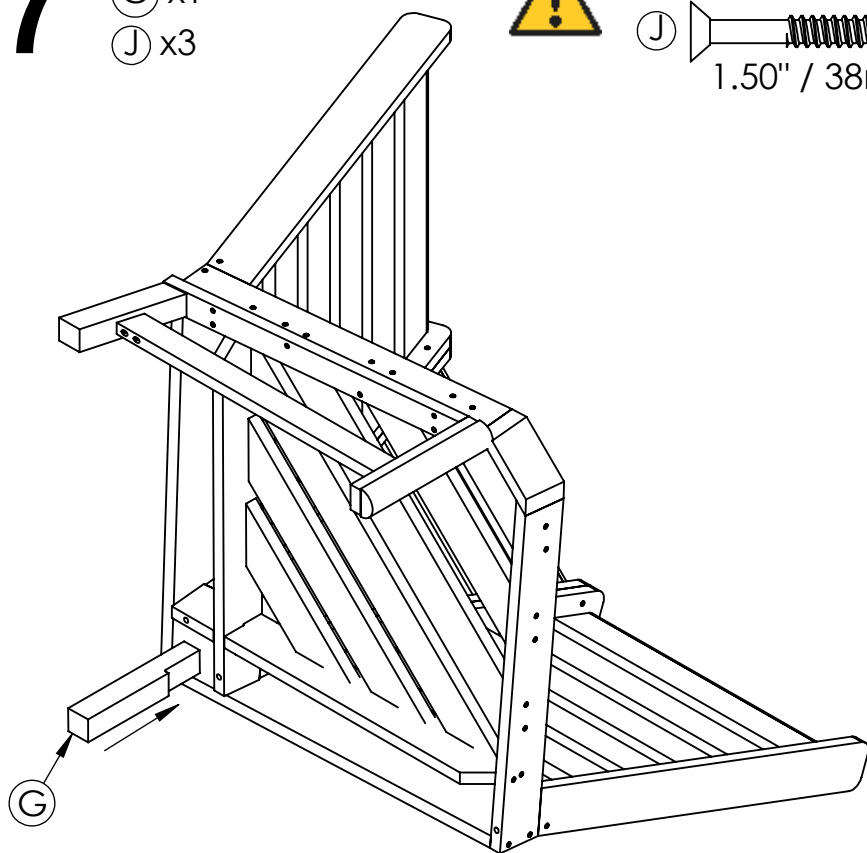


8

ⓓ x1



Ⓙ x2



CHECK THE SCREW SIZE BEFORE USE



1.50" / 38mm

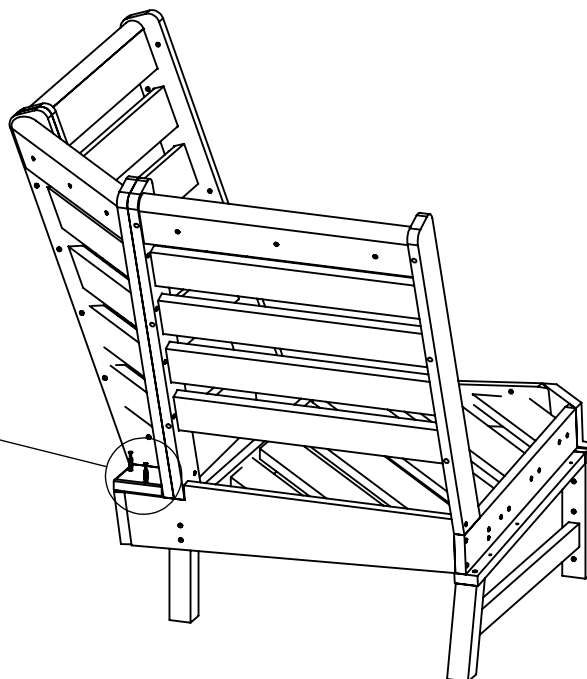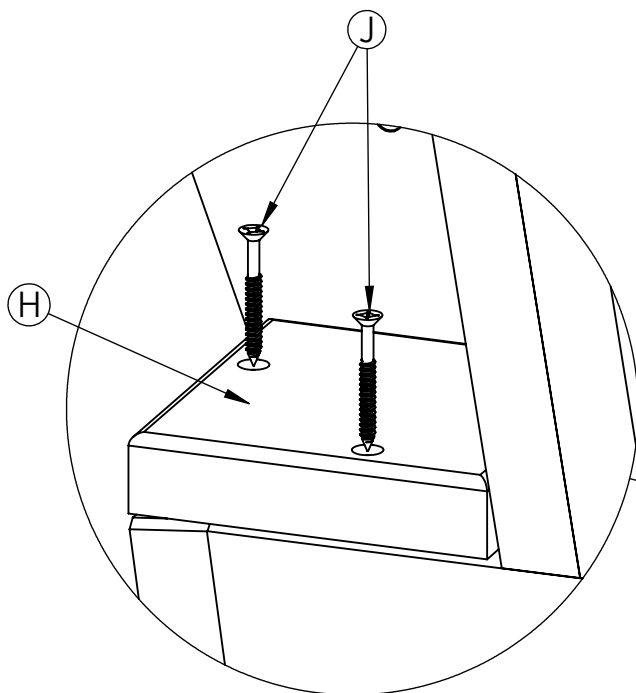

DSF296

SECTIONAL CORNER

BOX #:
DSF296

**DSF295
EXPANSION KIT**

BOX #:
DSF290SB (EA.)
DSF295CL (EA.)

**DSF295
EXPANSION KIT**

BOX #:
DSF290SB
DSF295CL


**DSF291
CHAIR**

BOX #:
DSF290SB
DSF290ARM




REVIEW NEXT PAGES FOR FURTHER ASSEMBLY DETAIL.

REMAINING ① FROM DSF296 TO BE USED FOR ATTACHING TO THE NEXT SEAT/BACK.



9

① x20

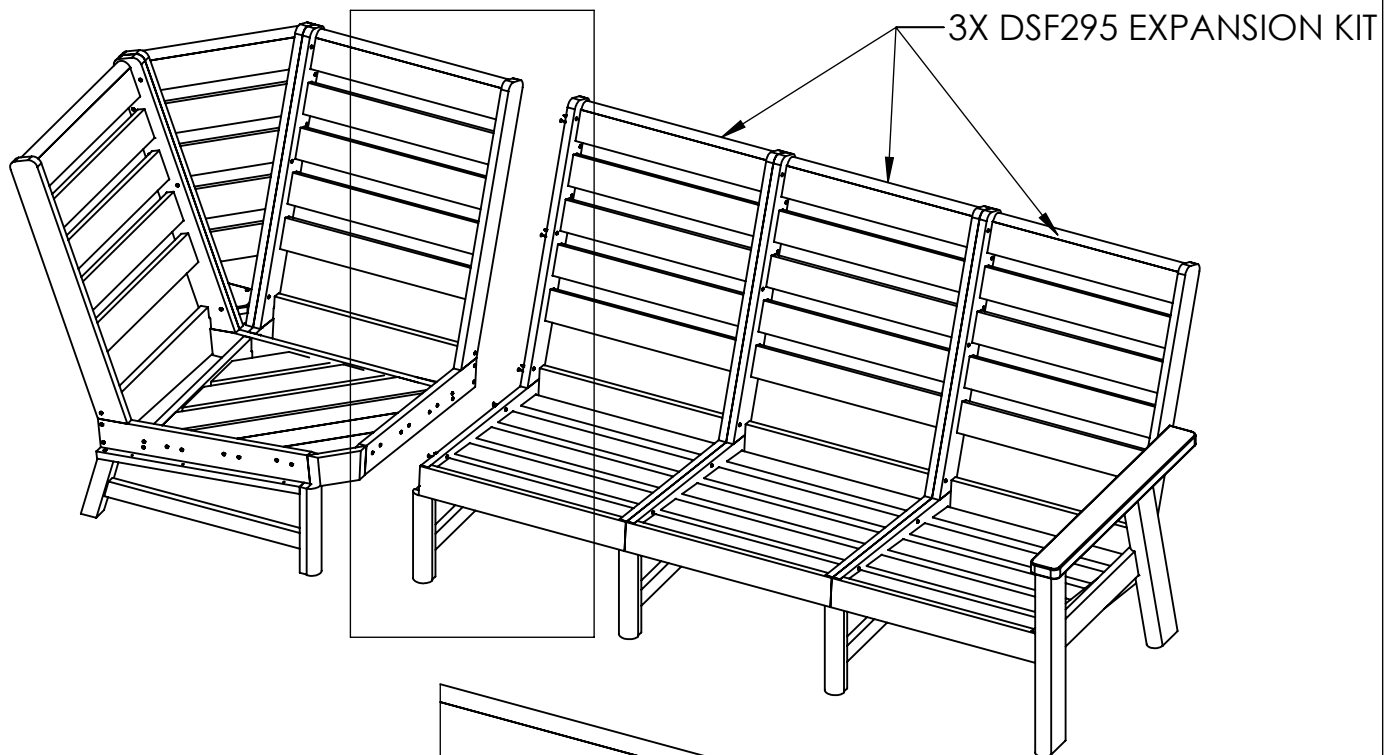


① x5

NOTE: 5x ① FROM OTHER SIDE



USE REMAINING SCREWS FROM DSF296 SECTIONAL

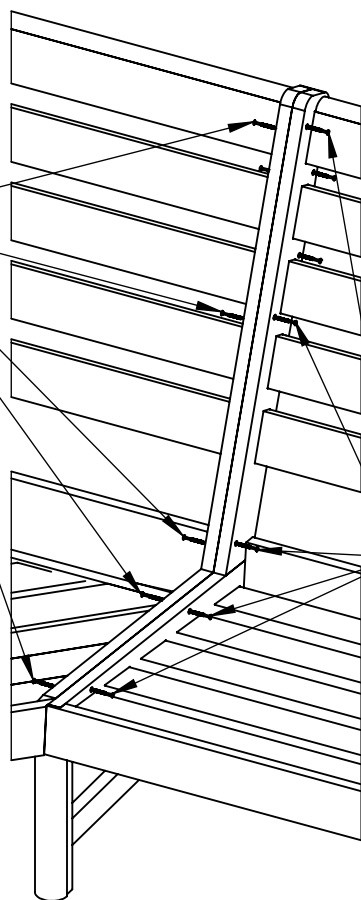

① (1.50" / 38 mm SCREW)


NOTE: 5x ① FROM OTHER SIDE

10


ⓐ x6



SCREWS CAN BE FOUND
WITH DSF295 EXPANSION KIT

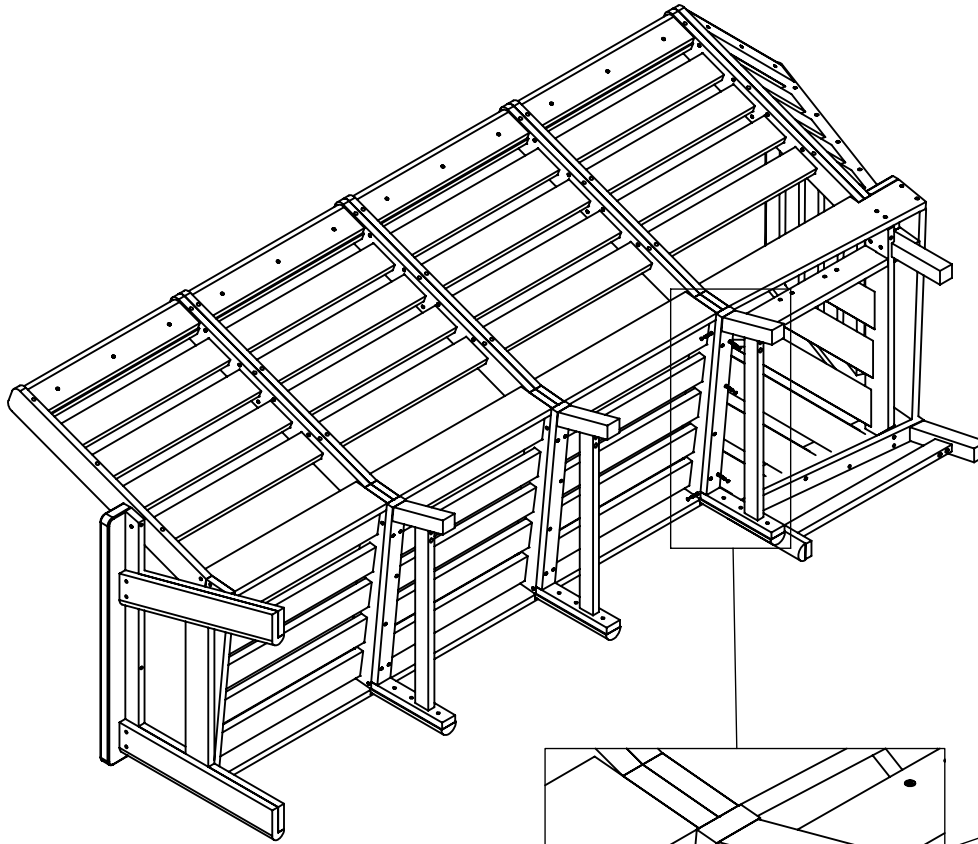


ⓐ x5
(1.50" / 38 mm SCREW)

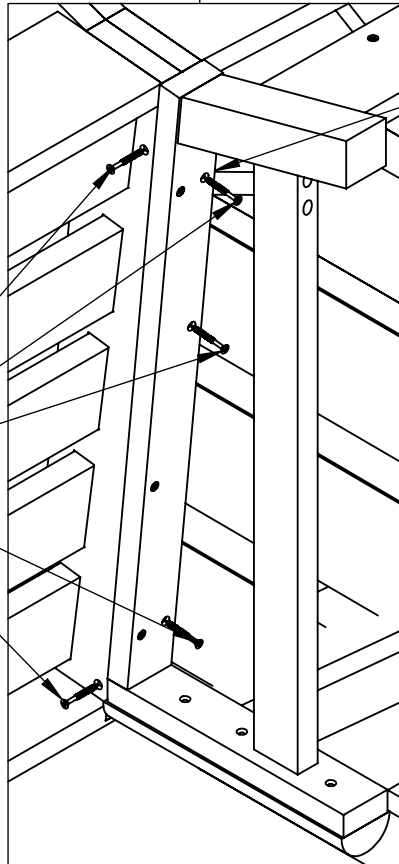


ⓐ x1
HIDDEN SCREW
THIS SIDE

2X DSF295 EXPANSION KIT


11 ① x20
(1.50"/38 mm SCREW)

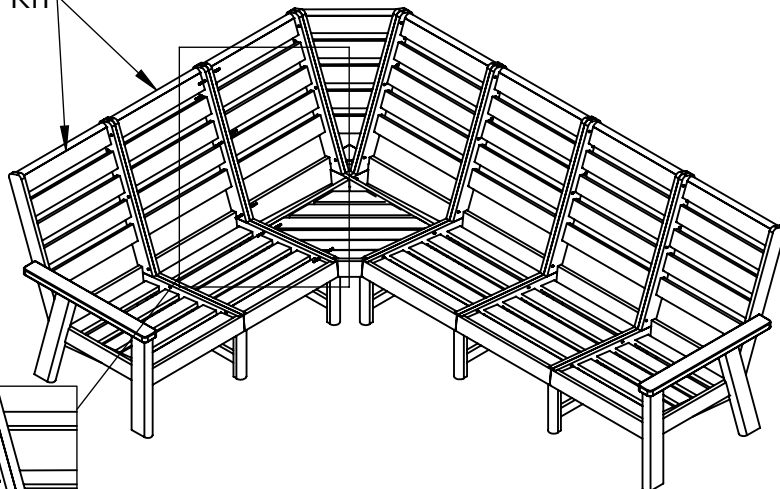

① X5
(1.50"/38 mm
SCREW)

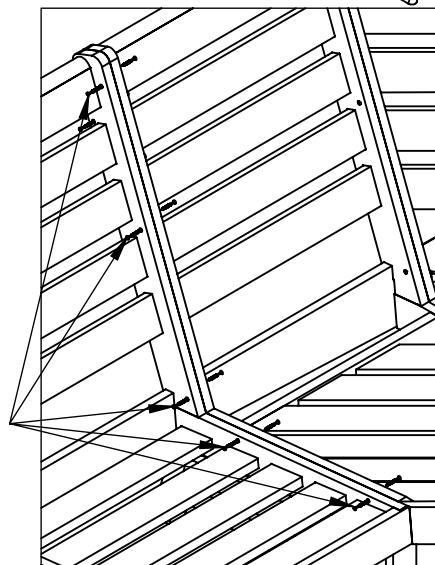


NOTE: 5x ① FROM
OTHER SIDE

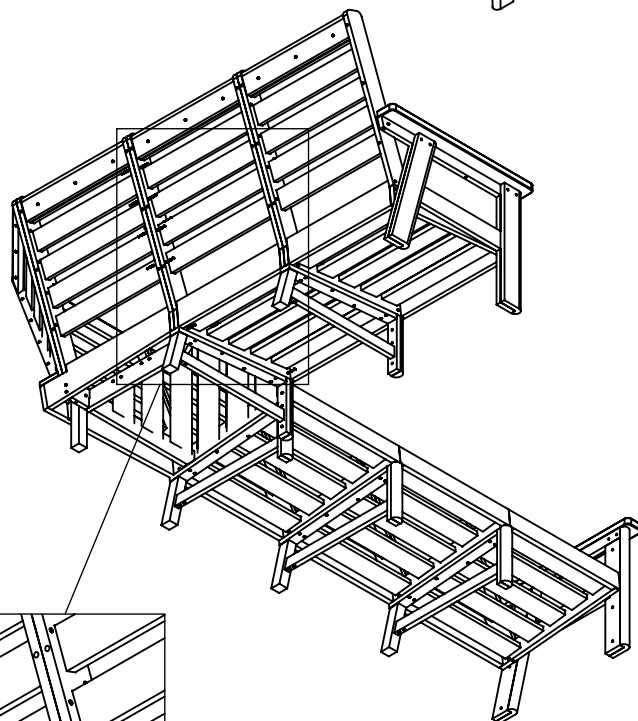

① X5
(1.50"/38 mm
SCREW)

NOTE: 5x ① FROM
OTHER SIDE

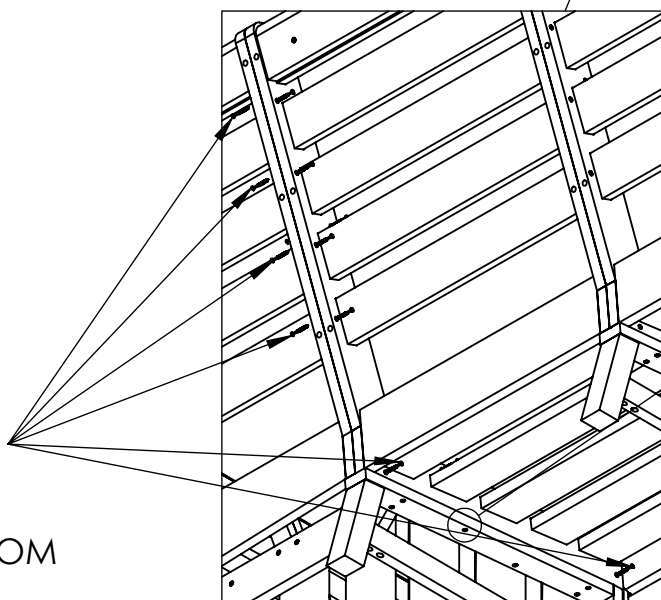

3X EXTRA COUNTERSINK HOLES.
- NO NEED TO ADD ANY
SCREWS HERE.

EXTRA FASTENER:

